



BALL DISPENSER

MICROLINE 8

CONTENTS

<u>1.</u>	<u>1 General information</u>	<u>4</u>
1.1.	Preface	4
1.2.	EC Declaration of Conformity	5
1.3.	Description	6
1.3.1	Ball Dispenser	6
1.3.2	Ball Management System	6
1.4.	Identification	6
1.5	Technical specifications	7
<u>2.</u>	<u>Safety</u>	<u>8</u>
2.1	General	8
2.2	Conformity with mandatory requirements	8
2.3	Remaining risks	8
2.4	Authorised use	9
2.5	Unauthorised use	9
2.6	Emergencies	10
2.6.1	Fire	10
2.7	Operational reliability	10
<u>3.</u>	<u>How to use the Ball Dispenser</u>	<u>11</u>
3.1	Necessary qualifications	11
3.2	BA-16 Control System	11
3.2.1	Introduction	11
3.2.2	Getting started	12
3.3	Payment Methods and Prices	13
3.3.1	Range Servant® Tokens	13
<u>4.</u>	<u>Design and function</u>	<u>15</u>
4.1.	General	15
4.1.1	Machine exterior	16
4.1.2	Machine interior	17
4.2.	Description of components	18
4.2.1	Grid	18
4.2.2	Payment Methods	18
<u>5.</u>	<u>Maintenance</u>	<u>19</u>

5.1.	General	19
5.2.	Periodical maintenance	19
5.3.	Maintenance intervals and instructions	20
5.4.	Troubleshooting and repair	21
5.5.	Function test	23
6.	<u>Installation</u>	24
6.1.	Factory testing and configuration	24
6.2.	Installation of the ball dispenser	24
	Possible number of balls upon each payment	26
6.3.	Installation – Wiring Diagram	27
6.3.1	Wiring of Payment Systems	27
	Token	27
6.3.2.1	Mechanical Coin Control	28
6.3.3	Cables	29
6.3.3.1	Cable Specifications	29
6.3.2	Power supply	29
7.	<u>Spare parts</u>	30
	Control box	30
7.1.1	Grid inside ball dispenser, viewed from above	31
8.	<u>Retailers and representatives</u>	32
8.1.	Head Office	32
8.2.	Your Sales Representative	32

1.1 General information

1.1. Preface

Thank you for choosing a Range Servant machine.

This User's Manual contains all the information necessary to fully understand the maintenance and operation of the machine.

Study the User's Guide carefully before using the machine. If these instructions are not followed, persons using the machine might be injured or the equipment itself be damaged. In many cases, following the instructions is a necessary condition for Range Servants' warranty to be applicable. Every person operating the machine must read these instructions.

No part of this publication may be reproduced without the written authorisation of Range Servant.

We offer a limited one-year warranty on our Ball Dispensers. This does not include payment systems and normal wear and tear. Study the warranty conditions carefully and keep them in a safe place. If you have any questions, or if problems should arise, please contact your Range Servant representative.

ONE-YEAR WARRANTY

Range Servant AB hereby undertakes to provide a warranty on material and function on the RANGE SERVANT dispenser for one year from the date of delivery. The guarantee does not cover payment systems and wearing parts. This engagement applies to repaired or replaced components for a period of three months. This undertaking only applies to the original purchaser. It also applies only to shortcomings of those parts, which the manufacturer verifies after due inspection. Repairs or replacement of parts may only be carried out by a representative authorised by the manufacturer. The manufacturer also guarantees that the equipment delivered matches the product description supplied. **THE UNDERTAKINGS SPECIFIED IN THIS AGREEMENT CONSTITUTE THE MANUFACTURER'S SOLE OBLIGATION TOWARDS THE PURCHASER. THE MANUFACTURER IS IN NO WAY RESPONSIBLE FOR ANY UNDERTAKINGS OUTSIDE THE FRAMEWORK OF THIS WARRANTY CERTIFICATE.** Neither is the manufacturer responsible for any undertakings given by any outside person during the sales negotiations. The warranty agreement does not apply to equipment that has been repaired or replaced by persons/companies not authorised by the manufacturer. The manufacturer's warranty undertaking does not apply if the equipment is used incorrectly, if it has been damaged through improper maintenance or accidents or if it has been handled in a way not specified in the manual which is supplied with the dispenser upon delivery. The manufacturer is also free from financial liability for any type of injury that may arise in connection with the sale and repair of the equipment and from injuries to third parties in conjunction with its use.

1.2. EC Declaration of Conformity

In accordance with the Machine Directive 89/392/EEC, annex IIA.

The Manufacturer:

RANGE SERVANT[®]

Range Servant AB
Skallebackavägen 11
SE- 302 41 HALMSTAD
Sweden

The Representative:

(To be filled out by a representative established within the EU)

.....
Company

.....
Address

.....
Telephone

Declare that:

Ball Dispenser
Machine

.....
Type

.....
Serial no., manufacturing no. etc.

A) is in conformity with Council Directive 89/392/EEC of 14 June 1989 concerning approximation of the laws of the Member States relating to machines in particular as referred to in Annexe I to this Directive concerning essential health and safety requirements in connection with the design and manufacture of machines, as amended by Council Directive 91/368/EEC of 20 June 1991 on the amendment of Directive 89/392/EEC concerning approximation of the laws of the Member States relating to machines;

B) *(if applicable)*

are manufactured in accordance with the following regulations, directives etc.:

C) *(if the requirements under A have been fulfilled)* that the harmonised standards 292-1, 292-2 and 292-2A (or parts thereof) have been applied

D) *(if applicable)* are manufactured according to the following national standards and technical specifications:

Halmstad,
Date

Elvis Knez
President *Signature*

1.3. Description

1.3.1 Ball Dispenser

The Ball Dispenser can be used either as a stand-alone machine or it can be integrated into a complete, automated system - the Range Servant Ball Management System.

The user-friendly ball dispensers from Range Servant are designed to accept different types of payment and to deliver, quickly and consistently, the exact number of balls. Prices are differentiated and several payment methods can be used in parallel. The number of dispensed balls per payment can be easily changed by the user himself. The balls are handled with care and only undamaged and clean balls are delivered to the player.

1.3.2 Ball Management System

Range Servant can deliver a complete, flexible Ball Management System adaptable to any kind of driving range requirements. The Ball Dispenser can be combined with the work-efficient, environment friendly Ball Washer. The Ball Washer in turn can be connected to the Elevator, the Conveyor Belt or the Blower for the transport of clean, undamaged balls from Washer to Dispenser. The system also includes a Ball Picker machine picking up used balls from all over the driving range. Thus the circle is closed and manual work reduced to a minimum.

By applying our extensive know-how to the specific problems of every driving range we are able to offer tailor-made solutions.

1.4. Identification

When contacting Range Servant, please identify your machine with the help of the information contained in the identification plate. The identification plate is well visible and firmly attached and contains the following information:

- Name and address of the manufacturer
- CE-marking
- Designation of series or type of machine
- Serial no., if any
- Year of manufacture

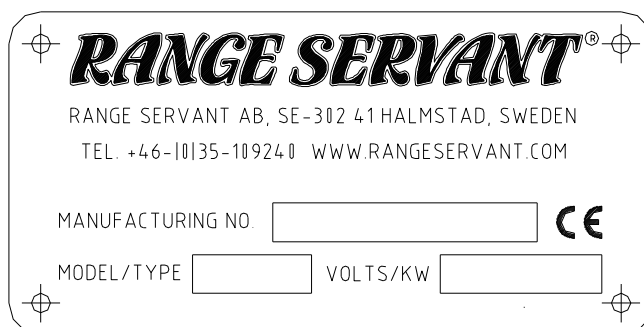


Fig. 1: Product identification plate

1.5 Technical specifications

General	ML-8
Capacity [balls]	8 000
Settings [balls/turns]	9-17
Settings [turns/ payment]	1-999
Dimensions:	
Height [mm] /([in])	1476 / 58.1"
Height with open lid [mm] /([in])	1950 / 76.8"
Width [mm] /([in])	1012 / 39.8"
Depth [mm] /([in])	760 / 29.9"
Weight, with balls [kg]	462
Weight, without balls [kg]	95
Electric system:	
Mains voltage (V, 50 Hz)	230
Control voltage (V, DC)	12
Effect, feeding motor (W)	70
Operating Conditions:	
Operating Temperature [°C] /([°F]) +2 - +50° C 35.6F – 122 F	

* Ball Washer and elevator not included

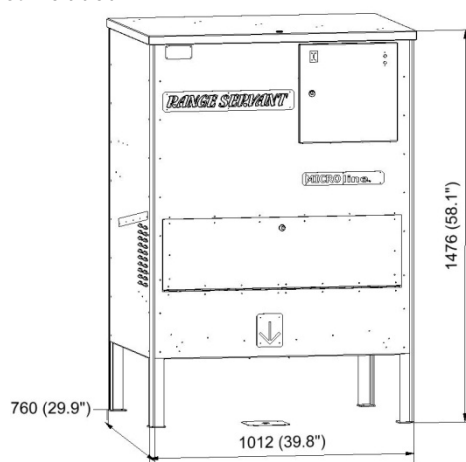


Figure 2: Ball Dispenser ML-8

The level of airborne noise has been measured for an identical machine under normal operating conditions.

The values indicate the sound pressure level measured 1 m from the sides of the machine and 1,6 m from the floor or access platform.

Sound pressure at the machine (dB, Peak) 86

Sound pressure at the machine (dB, A) 75

The manufacturer reserves the right to alter any details of the products without prior notice.

Patents and patent applications:

DE 3889445.9, ES 2052777, FR 88850056.8, GB 0328855, IT 25055BE/94, NL 88850056.8

2. Safety

2.1 General

Safety measures are a combination of measures taken by the manufacturer when designing and building the machine and measures that have to be taken by the user.

The machine has been designed to function for its intended purpose. It has been designed and manufactured in such a way that configuration and maintenance can take place with the least possible risks to the operator, provided such work is carried out according to the instructions laid down in the User's Manual.

The objective of the safety measures is to eliminate all accident hazards during the operational life of the machine which also includes the assembly and dismantling of the machine, including any hazards arising as a consequence of such abnormal circumstances as can be anticipated.

Accessories and spare parts that have not been approved by Range Servant can lead to personal injuries and/or equipment damage and affect the operational reliability of the machine. For the sake of safety you should therefore exclusively use accessories and original Range Servant spare parts recommended by Range Servant.

Such accessories and spare parts are specially intended for the machine and are approved by us with regard to safety.

All Range Servant retailers keep accessories and spare parts at your disposal along with competent advice. They also have the technical qualifications necessary for installing your machine and are informed about what technical changes are authorised.

Damage caused by the use of accessories and spare parts not having been approved by Range Servant and damage due to unauthorised technical modifications are not covered by the warranty obligation.

2.2 Conformity with mandatory requirements

The Range Servant ball management machines fulfil the personal safety requirements of the EU Machine Directive 89/392/EEC as amended by Directives 91/368/EEC, 93/44/EEC and 93/68/EEC, with a special reference to Annex I of the Directive concerning essential health and safety requirements in connection with the design and manufacture of machines, as amended by Directive 91/368/EEC. Furthermore the harmonised standards 292-1, 292-2 and 292-2A (or parts thereof) have been applied.

The electrical equipment fulfil the safety provisions laid down in the EU low voltage directive 73/23/EEC, as amended by directive 93/68/EEC.

2.3 Remaining risks

There are warning signs serving as a reminder and warning to the user of any remaining risks, i.e. risks that we have not been able to eliminate, or sufficiently minimise, in our design and against which technical safety measures do not provide complete, or sufficient, protection. The warning signs shall be written in the local language and, on request, in the language understood by the respective operator. The signs are yellow with black characters. They are big enough to be readable from a distance of three meters.



Fig. 3: Warning signs on front hatch

- Always disconnect the power supply to the machine before carrying out maintenance or service work. The mains switch is located in the control box in the lower right hand corner of the printed circuit board.



Fig. 4: Warning signs in control box

- Never touch the circuit board or other electrical components in the control box. They can be current conducting and cause injury to person and/or equipment damage
- Mechanical or electrical alterations may only be undertaken in consultation with Range Servant.

2.4 Authorised use

The ball-dispensing machine may only be used for the distribution of golf balls. For the machine to operate properly, the balls must be clean and undamaged or else they may get stuck and cause machine failure.

Distribution of balls may only start provided the machine has been installed according to the instructions contained in this Manual.

2.5 Unauthorised use

Using accessories or spare parts not recommended by Range Servant might cause personal injury and/or equipment damage and affect the operational reliability of your ball dispenser. For safety reasons, use only those components recommended by us. They are intended for your machine, they have been chosen for safety reasons and they are approved by the manufacturer.

Damage caused by the use of accessories and spare parts not having been approved by Range Servant or damage due to unauthorised technical changes are not covered by the warranty obligation.

2.6 Emergencies

2.6.1 Fire

Water shall be used as an extinguisher in the event of fire, except if the fire is located in the electric equipment, where a carbon dioxide extinguisher must be used.

2.7 Operational reliability

For trouble-free operation and long service life the instructions below should be followed:

- Place the ball-dispensing machine on a firm and level surface.
- Place the machine under cover so that only the front is accessible to members of the public. If the machine is card-operated it must stand under cover for the warranty to apply.
- Never strain the machine by loading it with more balls than recommended. The loading capacity for your machine is stated in the Technical Specifications at the end of the Manual.
- The machine should be connected to its own wall socket to prevent interference with its electronic system.
- Make sure that the electric box is always properly shut and covered when rinsing the machine. Moisture and water can damage the electrical components.
- When cleaning inside the dispenser never spray water directly onto the electric motor.
- By temperatures below 2°C the machine should be equipped with a warm air fan or, as the case may be, the water supply should be closed off, in order to avoid ice building up inside the ball dispenser.


3. How to use the Ball Dispenser

3.1 Necessary qualifications

Due to the complex design and operation of the machine the person carrying out service and maintenance work must have the necessary qualifications. He is required to have attended a training course, in the form of a comprehensive study of the User's Manual, followed by a written statement to the fact that he has well understood its contents.

If the person has to be absent from work for more than three months, training has to be repeated.

3.2 BA-16 Control System

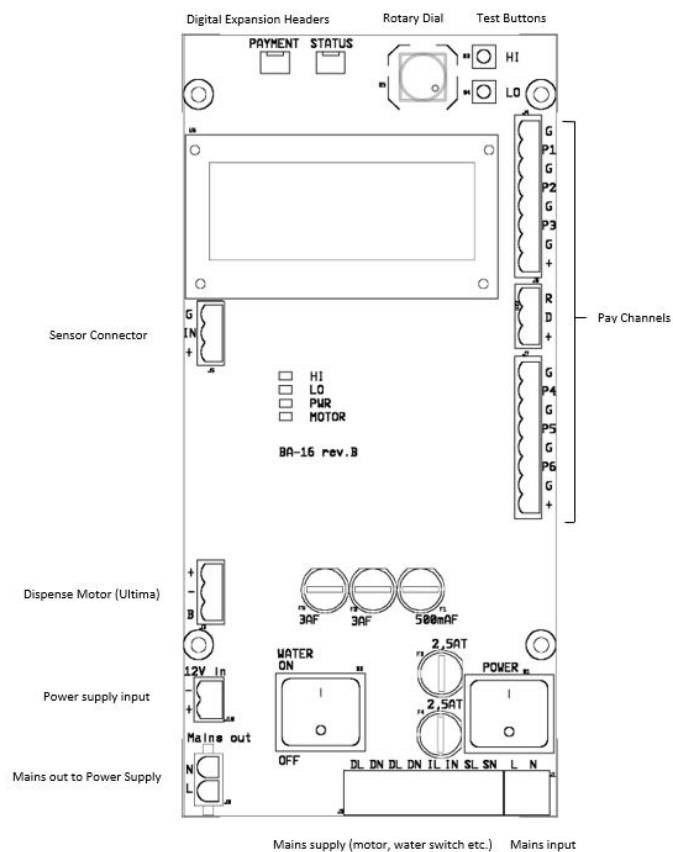

3.2.1 Introduction

BA16 is a control system intended for use with Range Servant's Ultima and RS series of ball dispensers. It offers up to six separate payment inputs (channels) and allows for ball amounts to be adjusted for each channel. It also offers connection to smart payment systems as well as connection to Range Servant's ConnectedCare maintenance system.

3.2.2 Getting started

3.1. Menu System

The menu system is operated using the Rotary Dial. To display the menu, turn the Dial clockwise. Navigate the menu by turning the Dial clockwise or anti-clockwise. To edit a menu item 'click' the dial by pressing it inwards towards the circuit board until it clicks.

Adjustments to the value is made by turning the Dial clockwise (increase) or anti-clockwise (decrease). Once desired value is achieved click the dial again to save the new value.

The display will go back into standby after some time of inactivity.

Menu items

- Speed Lo
This value adjusts the speed of the motor when there are five balls or less left to dispense. This is to make sure the motor has time to stop once correct ball amount is achieved.
Default value: 20
- Speed Hi
This value adjusts the speed of the motor when running at full speed.
Default value: 100
- Pay 1
Sets the amount of balls/turns to dispense when a pulse is given on Pay Channel 1
- Pay 2
Sets the amount of balls/turns to dispense when a pulse is given on Pay Channel 2
- Pay 3
Sets the amount of balls/turns to dispense when a pulse is given on Pay Channel 3
- Pay 4
Sets the amount of balls/turns to dispense when a pulse is given on Pay Channel 4
- Pay 5
Sets the amount of balls/turns to dispense when a pulse is given on Pay Channel 5
- Pay 6
Sets the amount of balls/turns to dispense when a pulse is given on Pay Channel 6

3.2. Front LED's

Ba-16 uses two LED lights to communicate its status to users.

- Green is lit when the dispenser is powered on.
- Red is lit during dispensing.
- Red is flashing continuously if previous dispense failed. Flashing continues until either a successful dispense has been made or until the board is reset.

3.3 Payment Methods and Prices

The Ball Dispenser is equipped with an operating panel where the customer can select the desired payment method. The panel contains two LED's, openings for coins or tokens, and a slot for magnetic cards or bill scanner.

The ball dispenser is also compatible with the Select.Lite™ software. Select.Lite™ is a complete and user-friendly front end for managing and controlling a ball management system. The payment methods available for the Select.Lite™ are the Select Members Card (MiFare), bar codes and tokens.


3.3.1 Range Servant® Tokens


Range Servant® has 16 different types of tokens for use in the Range Servant® mechanical token acceptor.

Token types: RS-I to RS-IX, RS-A to RS-H

There are also two types of tokens for use in electronic coin acceptors.

Token types: RS-90, RS-91

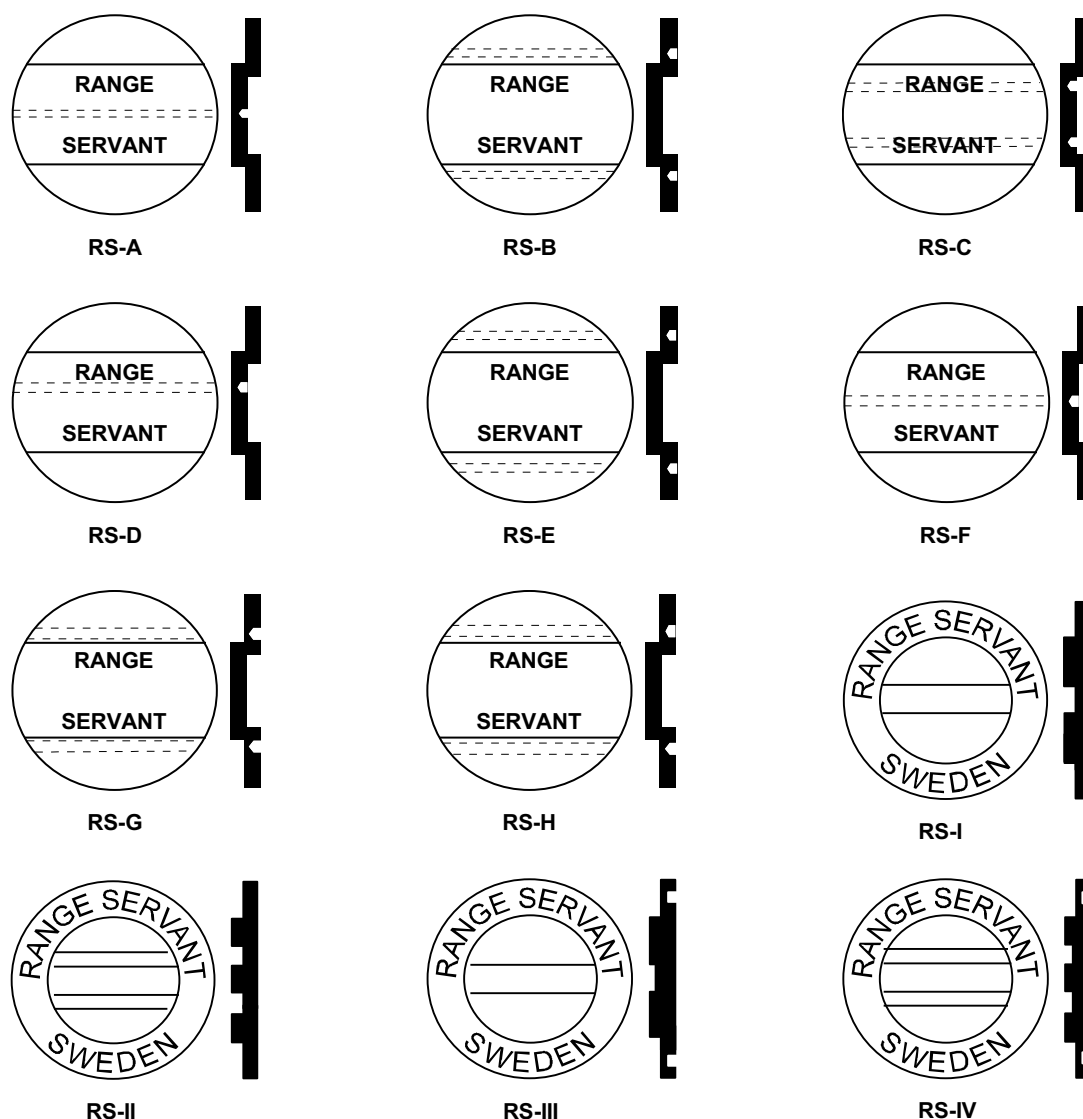

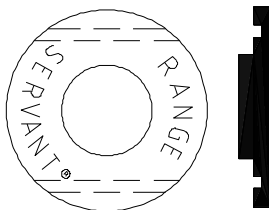


RS-V




RS-90




RS-91

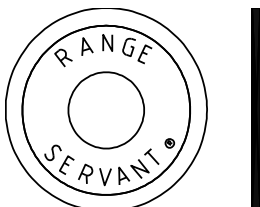

RS-VII

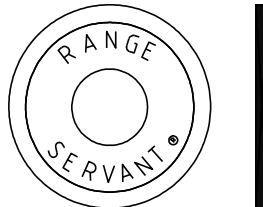

RS-VIII

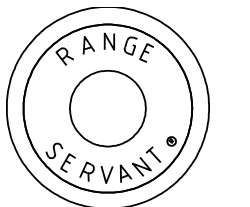

RS-IX

4. Design and function

4.1. General

The machine is intended for use as a golf ball dispenser. It consists of a ball magazine and is inside fitted with two plates on two levels for load reduction and, at the bottom, a grid.

The grid consists of a number of ball ducts, arranged next to each other, the ends being joined to form a hinged ball cradle. The depth of the cradle corresponds to the size of a golf ball. Thus, with each swing of the cradle only the numbers of balls inside the cradle are delivered to the ball chute.

All interior surfaces are inclined so that the balls are continuously flushed downwards. The lower level allows for damaged balls and debris to be sorted out.

All essential parts of the Ball Dispenser are manufactured of stainless steel, rust protected steel or aluminium.

The Range Servant Boll Dispenser has been designed in order to provide driving range owners with a long-lasting, reliable, practical and economic golf ball management system.

4.1.1 Machine exterior

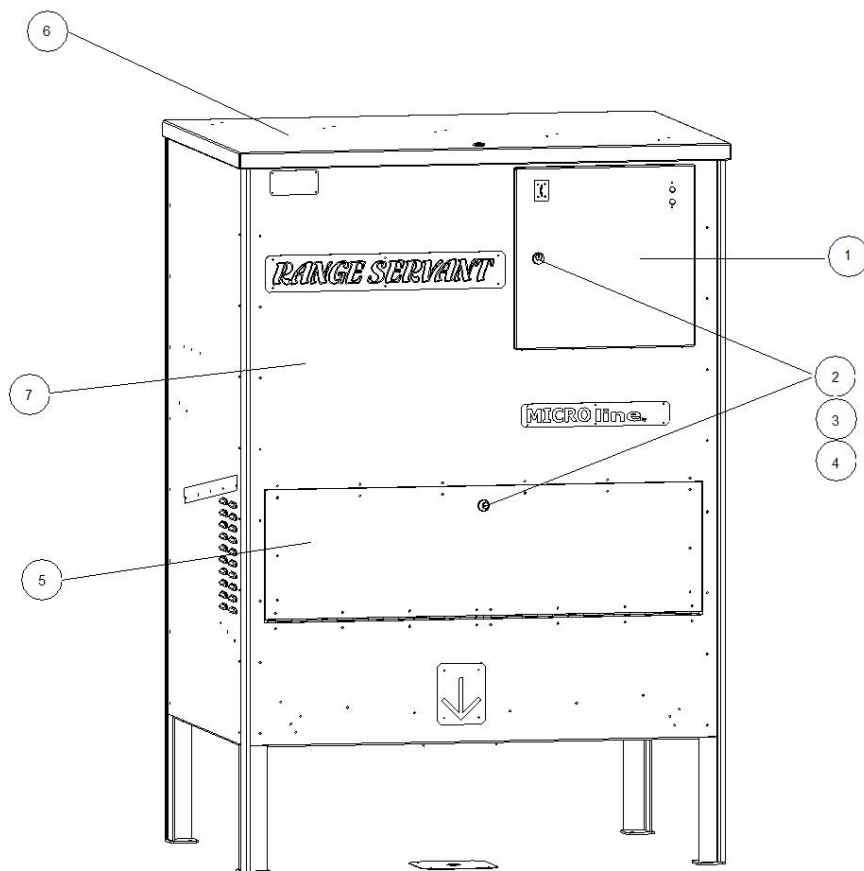


Fig. 5: Outside front view

Pos.	Designation
1	Control box door
2	Locks for control box, front hatch and lid
3	Shackle, front hatch lock and lid
4	Shackle, control box door
5	Front inspection hatch
6	Lid
7	Front panel

4.1.2 Machine interior

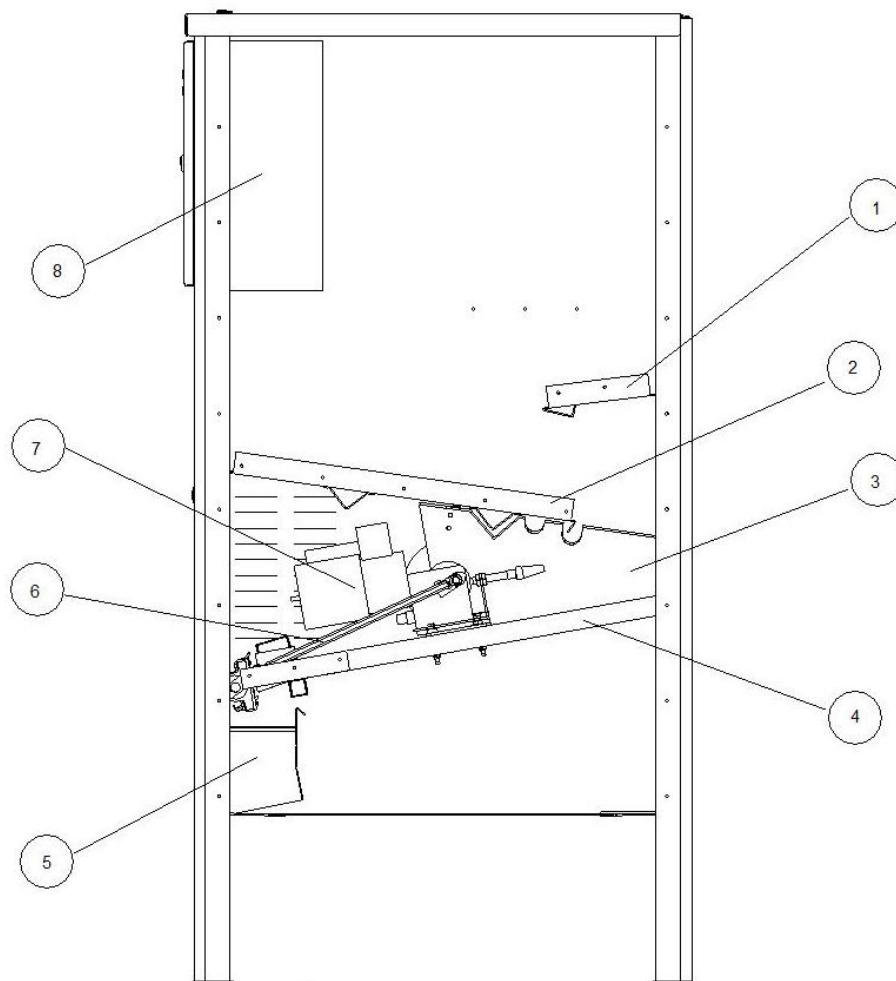


Fig. 6: Inside of the ball dispenser, side view

Pos.	Designation
1	Upper inclined plate
2	Lower inclined plate
3	Side plate of grid
4	Grid
5	Ball duct
6	6 edge shaft
7	Dispenser motor
8	Control box

4.2. Description of components

4.2.1 Grid

The grid consists of a number of ball ducts, arranged next to each other, the ends being joined to form a hinged ball cradle. The depth of the cradle corresponds to the size of a golf ball. Thus, with each swing of the cradle only the numbers of balls inside the cradle are delivered to the ball chute.

All interior surfaces are inclined so that the balls are continuously flushed downwards. The lower level allows for damaged balls and debris to be sorted out.

4.2.2 Payment Methods

The ball dispenser can be operated with tokens, coins or magnetic cards. Each machine can run more than one payment system at the same time, for example combining token/coin or token/coin/card. The number of balls dispensed need not necessarily be the same for the different forms of payment (see the examples).

5. Maintenance

General

Range Servant will provide accessories and original spare parts together with competent advice.

Maintenance carried out correctly minimises defects and ensures maximum service life and reliable operation. Any malfunctions are detected at an early stage and are therefore easily corrected. Regular maintenance minimises defects and equipment breakdown.

The following maintenance instructions only refer to the most common problems and their causes.

5.1. Periodical maintenance

5.2. Maintenance intervals and instructions

Maintenance intervals:

1. After 300 operating hours
2. Once every month
3. Once every golf season

Maintenance intervals and instructions		1	2	3
1	Machine exterior			
1.1	Lubricate the eccentric lock, the lid and front hatch locks and the hinges of lid and front hatch with ordinary lubricating oil.		X	
1.2	Lubricate the eccentric lock, the lid and front hatch locks and the hinges of lid and front hatch with ordinary lubricating oil.			X
2	Machine interior:			
2.1	Tighten the fixation bolts of the grid.	X		
2.3	Lubricate the linking arms with ordinary lubricating oil.		X	
2.4	The collecting pan should be opened and cleaned regularly, to prevent grit and other debris from accumulating in the pan and gradually leading to corrosion and blockage.			X
2.5	If chemical fertilisers are used on the driving range, we recommend that the dispenser is cleaned thoroughly once a month to prevent corrosion of the machine's internal components. Cut the power supply to the machine, open the front hatch, remove grass and other debris and rinse with clean water.		X	
2.6	Empty the machine, sort out worn or damaged balls, stones and grit etc and clean the inside with normal clean water. (Do not spray water directly onto the electric motor.)			X
2.7	Clean and dry the ball duct (located after the grid).			X
3	Electronic components:			
3.1	If the machine is fitted with a magnetic card reader EMC-30 the reader head has to be cleaned. Moisten a piece of cloth with methylated spirit, wind it round the card and slide the card through the reader 5-10 times.			X

5.3. Troubleshooting and repair

Although the operation of the machine is most reliable, problems may arise for various reasons.

Attention!

To reduce the time spent on troubleshooting, always start by checking that cables and connections are clean and tightened.

Symptoms	Possible fault	Corrective measures
The Ball dispenser does not start.	➡ The power supply is not connected.	➡ Connect the machine to the power supply.
	➡ The ON/OFF switch on the circuit card is not "ON".	➡ Set the switch in the "ON" position.
	Defective fuse(s) on the circuit card.	Replace the fuse(s) (2.5A/250V).
	➡ Payment method defect.	➡ Check the voltage with Ohmmeter. The voltage shall fall from 5VDC to 0VDC when active. All payment methods must be NO (Normally Open).
	➡ One payment channel is active.	➡ Measure the payment channel voltage and check that no channel is 0VDC.

Fig. 7: Problem – the Ball dispenser does not start.

The BA-99 control system requires at least one pulse from the micro-switch every ten seconds. Else the machine will make three quick starts and then close the feeding of balls.

Symptoms	Possible fault	Corrective measures
The Ball Dispenser does not stop.	➡ The micro-switch no. 105500 is not in the correct position, or has got jammed.	➡ Check that the micro-switch is correctly positioned and has not got jammed.
	➡ The supply voltage to the machine varies.	➡ Connect the machine to a separate wall socket.
	➡ The magnetic coil no. 10540 is defective.	➡ Check by disconnecting the automatic water feed. If the machine then works properly, replace the magnetic coil.

Figure 8: Problem – the ball dispenser does not stop














Symptoms	Possible fault	Corrective measures
The machine is running but does not dispense any balls.	 The machine is not standing on a level and firm surface.	 Use a spirit level to check that the machine is level.
	 The balls in the machine are dirty.	 Empty the machine of balls.  Clean the machine inside and rinse well. Fill the machine with clean balls - that have been run through the Range Servant washer.
	 By temperature below 2°C ice can have built up in the machine.	 If ice has built up, disconnect the water supply so that the machine is emptied of water. Make sure the ice has melted before using the machine
	 The ball cradle has got jammed.	 Open the front hatch and remove the object jamming the cradle.
	 The shock absorber is defective.	 Replace the shock absorber.
	 The motor shaft is damaged.	 Replace the motor.

Figure 9: Problem – no balls are delivered

If nothing above works please contact your RS distributor.
 Buy the RS IT/Mech support/source package in www.rangeservant.com

Symptoms	Possible defect	Corrective measures
The Ball Dispenser does not start.	<p>⇒</p> <p>⇒</p> <p>Token contacts do not close.</p>	<p>Check the voltage with Ohmmeter. The voltage should fall from 5VDC to 0VDC when active (=closed position). The token switch must be connected in the NO position (Normally Open).</p> <p>⇒ Check that the token cable is not damaged or has stuck.</p>
	<p>⇒</p> <p>The (Mechanical) Coin Control switch does not close.</p>	<p>⇒ See above re. token switch.</p>
	<p>⇒</p> <p>The coin output of Electronic Coin Control Cashflow 340 is not activated.</p>	<p>Activate coin output of Cashflow (acc. to 3.3.3.1 "Change of price, blocking of coins etc.").</p> <p>⇒ Measure payment channel with Ohmmeter. Voltage should fall from 5VDC to 0VDC when active. Check the price setting.</p>
	<p>⇒</p> <p>The debits of the magnetic card reader EMC-30 do not appear in the display.</p>	<p>⇒ There are no dispenses left on the card. Try a new card.</p> <p>⇒ Check that resistor 33k Ohm is not defective.</p>
	<p>⇒</p> <p>EMC-30 debit indications appear on the display but the displayed number does not change and dispensing does</p>	<p>Check that the mechanical switch of the reader unit is not closed.</p>

Figure 10: Problem – payment methods.

If nothing above works please contact your RS distributor.
Buy the RS IT/Mech support/source package in www.rangeservant.com

5.4. Function test

After maintenance or repair work the operation of the machine should be tested by running the machine with the front hatch open. Insert a coin/token or payment card and check that everything works to satisfaction.

6. Installation

6.1. Factory testing and configuration

The ball dispensers are always tested and configured before delivery to the customer. On this occasion all the parameters of the control system are adjusted according to the customer's wishes.

Our objective when carrying out this final check is to verify that the product corresponds on all accounts to the requirements laid down by the customer when ordering and to prevent defective products from being brought onto the market.

6.2. Installation of the ball dispenser

For trouble free operation, place the ball dispenser on a firm and level surface.

We recommend that the machine be located under cover and that only the front of the machine be accessible to members of the public. If the machine is card-operated, it must stand under cover according to the terms of the warranty.

Place the ball dispenser on a firm and level surface.

Remove the keys tied to the electric cable (see A) and remove the cable.

ATTENTION! Don't plug in the cable before the machine is ready to start.

The keys are identical and are used for opening the control box (see B).

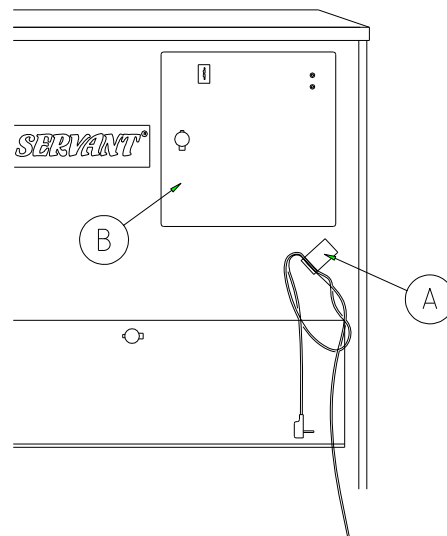


Figure 11: Location of the keys on delivery

Inside the control box there are another four keys, all identical, which fit the lid of the ball dispenser and the front inspection hatch.

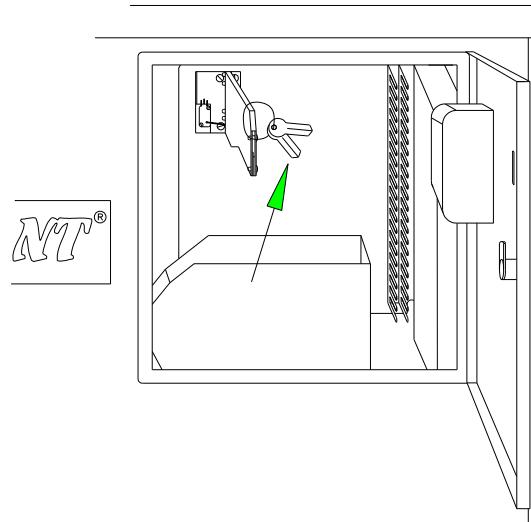


Figure 12: Location of keys in the control box.

Open the front inspection hatch and remove the package containing a plastic (PVC) pipe, a ball chute and the number of tokens you ordered for your machine.

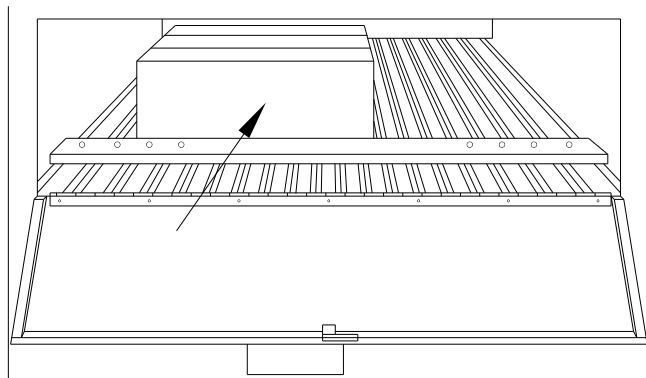


Fig. 13: Delivered material

Place the plastic tray inside the control box so that the tokens fall straight into the tray. If the machine is both token and coin operated, there will be two trays for sorting both forms of payment at source.

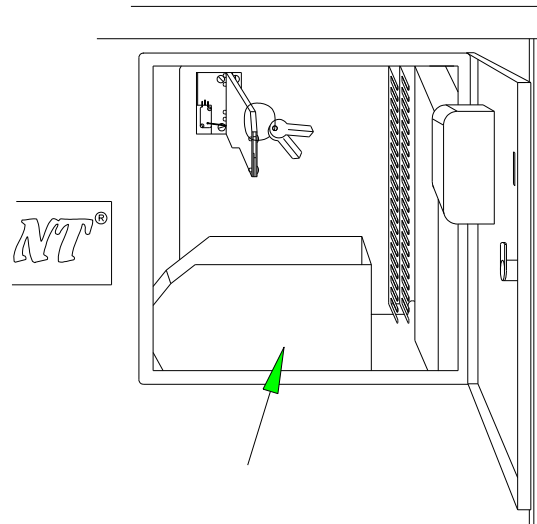


Fig. 14: Location of plastic tray.

You are free to determine the number of balls to be dispensed upon each payment.

Block the number of ball ducts required to obtain the desired amount of balls to be delivered each time. This is done by adjusting the number of pins (A) along the horizontal retaining arm according to the adjoining drawing and place the enclosed plastic pipes (B) in the blocked ball ducts that is closed to the centre.

Below is a table helping you to find out how many balls may be dispensed upon each payment.

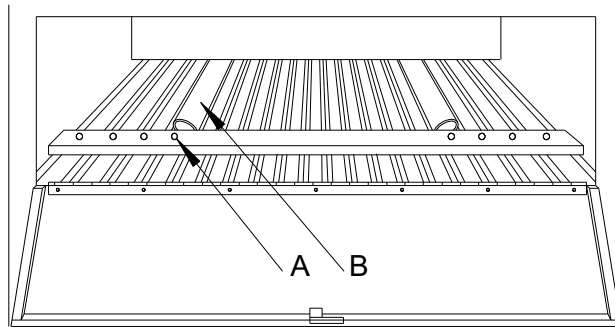


Fig. 15: Blocking of ball ducts

Possible number of balls upon each payment

Setting up number of balls on model ML-8.

	1-turn	2- turn	3- turn	4- turn	5- turn	6- turn	7- turn	8- turn	9- turn
8 pins	9	18	27	35	45	54	63	72	81
7 pins	10	20	30	40	50	60	70	80	90
6 pins	11	22	33	44	55	66	77	88	99
5 pins	12	24	36	48	60	72	84	96	108
4 pins	13	26	39	52	65	78	91	104	117
3 pins	14	28	42	56	70	84	98	112	126
2 pins	15	30	45	60	75	90	105	120	135
1 pins	16	32	48	64	80	96	112	128	144
no pin	17	34	51	68	85	102	119	136	153

Fig. 16: Possible number of balls upon each payment

6.3. Installation – Wiring Diagram

6.3.1 Wiring of Payment Systems

Token


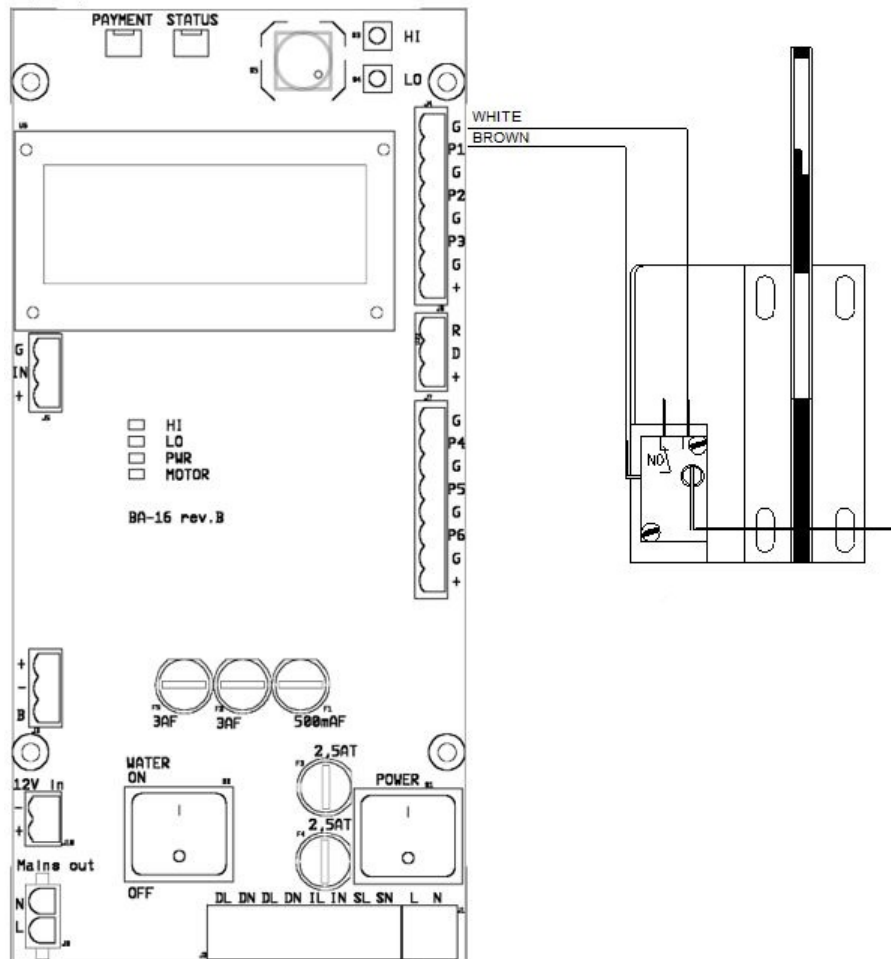


Figure 17: Wiring of the Range Servant Token Control.

The micro-switch for the token control must be connected as **NO** , Normally **O**pen.

 The mechanical coin control is wired according to the same wiring diagram as the token control (see above "Token")



6.3.3 Cables

ATTENTION! No cables may be exchanged without the prior consent of Range Servant.

6.3.3.1 Cable Specifications

<i>Unit</i>	<i>Cable Type</i>
Mains supply	RKK 3x0.75mm ²
Motor (Dispenser)	RKK 3x0.75mm ²
Micro-switch	LIYY 3x0.75mm ²

6.3.2 Power supply

All machines can be supplied with 230/115 VAC +/- 10% 50-60Hz.

7. Spare parts

In this chapter you will find detailed drawings of the ball dispenser showing the location of the different spare parts. The tables accompanying the drawings contain information about spare parts number and designation and the quantity of each spare part installed per machine model.

()= Optional accessories are marked with a parenthesis around the digit representing quantity.

- = The alternative marked with "-" depends on the customer's choice of equipment.

Control box

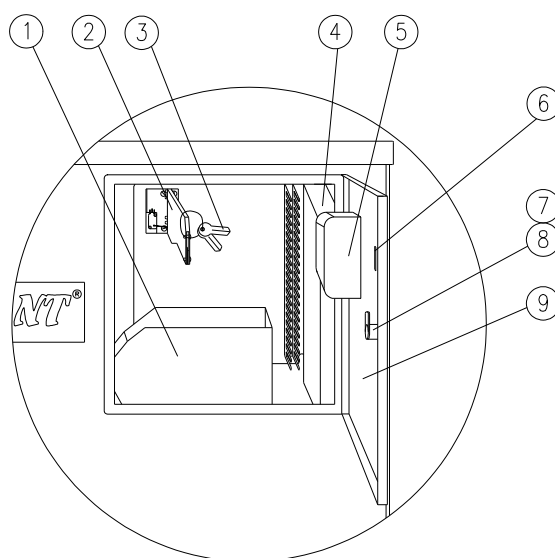


Fig. 19: Control box

Pos.	Part. No.	Designation	ML-8
1	109410	Token collecting tray, small	1
1	109400	Token collecting tray, large	(1)
2	108600	Token monitor	1
3	101920	Spare keys	-
4	930235	Printed circuit board BA-99	1
5	-	Coin monitor	-
6	-	Token slot	-
7	101900	Lock	1
8	101960	Shackle, control box door	1
9	-	Control box door	1

() Optional equipment within brackets

* Quantity per side

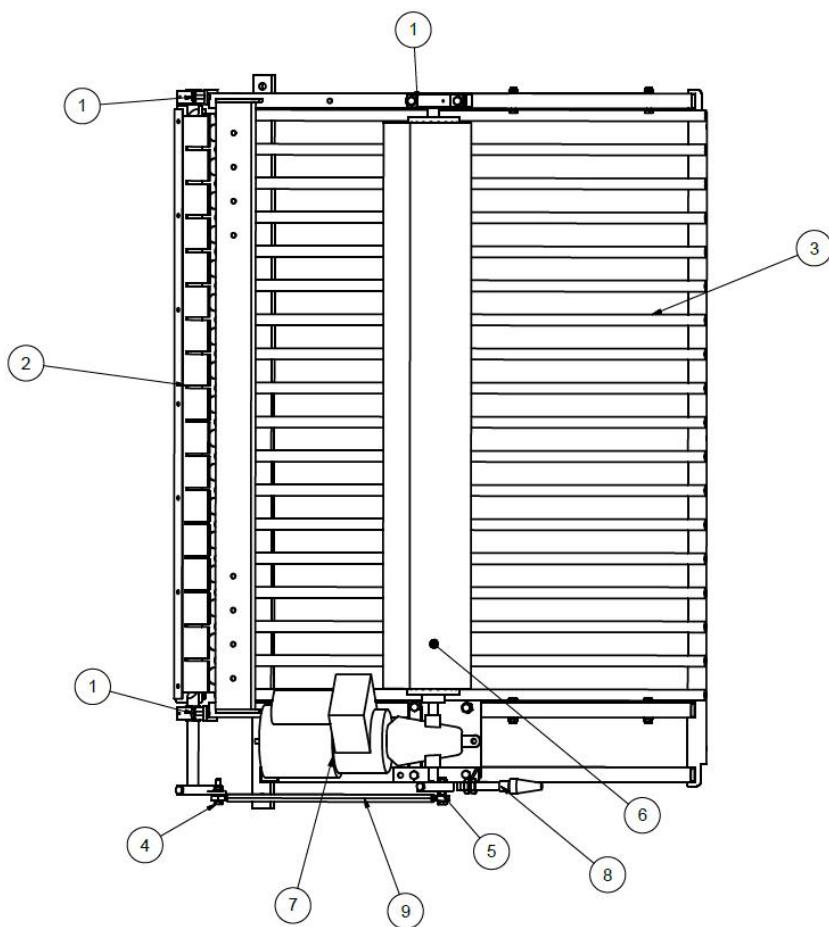


Figure 20: Grid viewed from above

7.1.1 Grid inside ball dispenser, viewed from above

Pos.	Part No.	Designation	ML-8
1	104 650	Ball bearings	3
2	ML0000	Ball cradle	1
3	183 700	Grid	1
4	104 510	Linking spindle, left-hand thread	1
5	104 500	Linking spindle, right-hand thread	1
6	104 100	Roller brush	1
7	105 605	Dayton, Motor	1
8	105 500	Inductive Sensor	1
9	ML0009	6 edged shaft	1

- quantity per side

8. Retailers and representatives

The following list contains all the necessary information concerning the Range Servant representative closest to where you live.

The list is continuously updated on our home page <http://www.rangeservant.com>

8.1. Head Office

Sweden

Range Servant AB

Skallebackavägen 11

302 41 HALMSTAD

Telephone: +46 35 10 92 40

Fax: +46 35 10 82 20

E-Mail: sales@rangeservant.com

8.2. Your Sales Representative

You will find your representative at
www.rangeservant.com/sales-distribution